

How to easily adjust the clip light that came with your lovelight:



1

Does the light for your new lovelight hang too far out of the gap? Just follow the instructions below to fix it!

Lift the arms on the sides of the light. This will loosen up the hole in the center that holds it in place.



2



3

Slide the metal piece all the way to the bottom of the light.

Insert light - the bottom of the arms will be level with the bottom of the bisque. Place the cord inside groove on bottom.



4



5

Now your lovelight sits level. Enjoy!