





# HOW TO: grout your completed mosaic project

- 1 Allow Weldbond adhesive to set for 24-48 hours.
- 2 Pour the dry grout in a disposable container. Stir in small amounts of water until the grout has a thick oatmeal consistency.

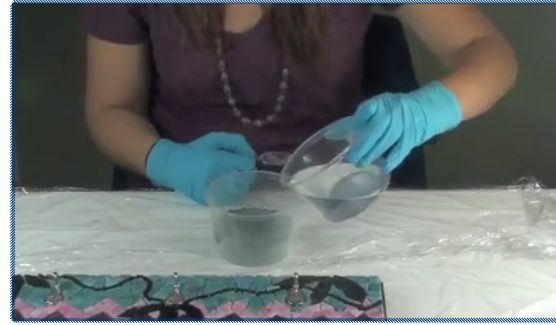

- 3 Thoroughly spread the grout over the mosaic surface. Be sure to push the grout into all of the cracks and crevices.

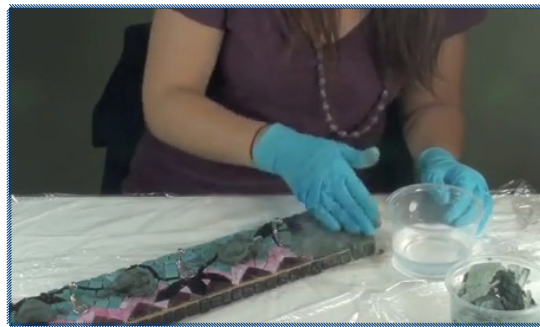

- 4 Allow to dry for 15-20 minutes until the mixture starts to get crumbly. Gently wipe away any excess grout on top of the tiles using a soft cloth.
- 5 Allow your project to sit for 15-30 minutes. Use water or glass cleaner and dry paper towels to clean the surface of the project.
- 6 Once dry, polish piece with a soft cloth. DO NOT put excess grout down the sink!

**WARNING:** Contains Portland Cement. Wear rubber gloves and eye protection. Avoid eye contact or prolonged skin contact. Wash thoroughly after handling. If eye contact occurs, flush with water for 15 minutes. Consult physician immediately. Do Not Breathe Dust! This product contains free Silica which may cause Cancer or delayed lung injury (Silicosis). Wear approved respirator in dusty un-ventilated areas.